

# PORTABLE PERFORMANCE PUPPET STAGE

## Assembly Instructions

Puppet Expressions, LLC, Elyria, OH 44035

[www.prestostage.com](http://www.prestostage.com)

Registered U.S. Patent D630266

Made in China

### ATTENTION! READ ALL DIRECTIONS BEFORE STARTING

This puppet stage is not a toy. The stage is intended to be assembled, used, and disassembled by adults. CAUTION: Care must be taken when handling metal frame and curtain rod assemblies. Follow directions and keep fingers or objects away from the scissor areas of the frame (i.e. the connection points of the frame rods), or bodily injury or damage to the frame may occur. Do not climb on the stage's metal frame. Do not lean on the stage. Do not place items on top of the stage, only on the play-board. To increase stability, place sandbags on the metal bars at the base of the stage. To disassemble the stage, follow the assembly directions in reverse. Do not force the frame to collapse. Wiggle the frame gently to settle the framework.

Thank you for purchasing a PrestoStage portable performance stage. With proper care, your stage will give you long and satisfying service. In the unlikely event that your stage is damaged due to shipping, you must contact the seller within 3 days of receipt and you must keep the original packaging when filing a claim.

PrestoStage warrants the stage to be free from defects in materials and workmanship for a period of 90 days from the date of purchase. If within the warranty period the stage is determined to have defective materials or workmanship, PrestoStage will, without charge for parts, replace the stage or its defective parts subject to the terms and limitations as follows.

1. Determination of defects and subsequent action to repair or replace the stage or its defective parts is at the discretion of PrestoStage.
2. The warranty does not cover periodic maintenance, repair, or part replacement due to negligence, wear and tear, failure to follow assembly and disassembly instructions, or treatment inconsistent with normal use.
3. A dated sales receipt of the stage is required when requesting warranty service.
4. In certain cases, shipping charges may apply.

You should always contact the seller of your stage to resolve any problems associated with shipping. You may contact Puppet Expressions, LLC at 844-5PRESTO (773786) for warranty service.

#### CONTENTS OF DUFFLE BAG:



Drawstring bag:  
(fabric cover, 2 curtains,  
playboard, folding curtain rod,  
2 L-shaped curtain rod extenders).



Folding metal  
frame

#### TO START:



Lift the two loose metal  
tubes (curtain rod holders)  
upward and out of the way.



Pull metal frame  
apart using an outward  
and upward motion.



As the frame enlarges,  
begin pushing the square  
hubs together.



Grab a square hub on the  
outside, and one on the  
inside, and push together.



Once the frame is brought to  
the correct height (6'), connect  
the plastic hooks to secure it.



Remove contents of drawstring bag. Begin by applying the fabric cover.



Apply the velcro of the cover to the corresponding velcro of the square hubs.



Begin at the stage opening and work your way to the top outside corner.




Stretch and smooth the fabric cover as you attach the velcro to the middle and bottom squares.



Work towards the center of the stage. Continue to line up the



top squares of velcro, then the middle and then bottom.

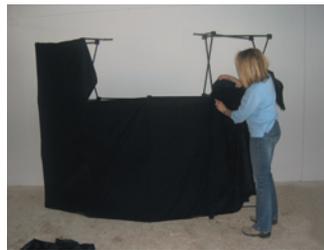

Work towards the other side of the stage, smoothing the fabric covering as you go.



Secure the fabric covering at the corner hubs.



Pull the covering around the back edge, attaching to the velcro hubs in the back.



Attach the velcro of the side stage flaps to velcro hubs in the back.




Unfold and place the playboard on the stage opening,



Attach the velcro to the fabric covering in the front of the stage and the velcro hubs in back.



Insert the L-shaped curtain rod extenders into the open metal tubes of the stage.

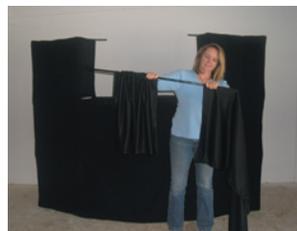

Straighten the curtain rod, slip the two curtains on to the ends of the rod.



Insert the curtain rod into the other end of the L-shaped rod extender.



Repeat process on other side.



The depth of the stage area is adjustable.



For average sized puppets, push the curtain rod extenders into the metal tube.



For larger puppets and stage opening, pull the curtain rod extenders out for more space.



Now it's time to have FUN!